

# DETOUR

**SUPERIOR VISCOSITY  
BARRIER SEALANT**

**PROFESSIONAL GRADE**

**#1 Brand Preferred by  
Maintenance Engineers**

*Approved for food  
preparation areas.*

**OUTSTANDING DURABILITY & ADHESION**


**THROUGH PENETRATION**

**Food Grade ingredients  
Surpassing Green  
Standards!**

**SEALS OUT  
EVERYTHING**

- ✓ **WATERPROOF**
- ✓ **EASY CLEANUP**
- ✓ **CRACK PROOF**

**DO IT ONCE.  
DO IT RIGHT.**

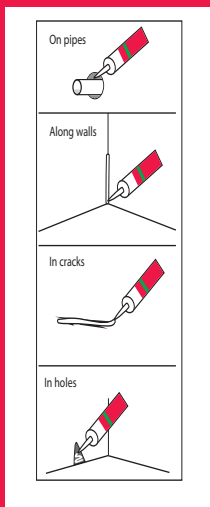

 **Made in the USA**

**10.0 FL OZ (295 ml)**

**Biorepellent Scientific Industries DeTour Sealant** is a biotechnology that combines outstanding durability and adhesion to seal without any synthetic toxins or harmful residue. DeTour Sealant is made from a patented blend of food grade materials. It's safe, effective, food safe and NSF certified. DeTour can be applied where surface water is present.

**WHERE TO USE:** Along walls, runways, vent screens, A/C ducts, holes in walls, holes in sidings, floor drains, doorways and GREASE TRAPS. Also place DeTour Sealant around both sides of doors to seal and create a barrier. (Apply around the door on each side not across the door). Apply under counter, on pipes, in holes, crevices, window sills and electrical conduits. Surfaces **MAY** be wet, dusty, greasy, oily, frosty or filled with foreign materials.

**BEFORE YOU USE:** While staining is unlikely, as with most household products, it is recommended that this product is tested for possible staining on an inconspicuous area if staining is an issue.

**INSTRUCTIONS:** Remove cap and cut nozzle at 45° angle to desired bead size. Apply DeTour Sealant to cracks and crevices, corners and along edges of walls completely filling the cracks and crevices or holes. Wipe off excess product to prevent people from coming into contact with the product. For difficult to reach areas, apply DeTour Sealant into a dish or tray and use a foam disposable brush for application.

**Storage & Disposal:** Store product between 15°F-120°F (9-48°C).

**WARNING!** May cause eye, skin, nose and throat irritation. CONTAINS: Purified capsaicin, white mineral oil, silica.

**PRECAUTIONS:** Avoid eye and skin contact. Wear gloves, long sleeve shirt and safety glasses. Wash thoroughly with soap and water after handling. Do not swallow.

**KEEP OUT OF THE REACH OF CHILDREN AND PETS. DO NOT TAKE INTERNALLY.**

Non-chemically curing sealant or caulking compound

Calif. ARB VOC less than 1.0 percent wt/wt

**FIRST AID INFORMATION:**

**Eye Contact:** Immediately flush eyes with large amounts of water for at least 15 minutes. Get medical attention if irritation persists. **Skin Contact:** Remove contaminated clothing and shoes. Immediately wash the affected area with soap and cold water. The soap binds with the capsaicin to wash it away, and the cold water lowers the temperature of your skin so that the chemical receptor in capsaicin TRPV1 is not activated. If burning sensation persists wash the affected area again with soap and cold water and repeat as necessary. If regular soap and water

does not completely wash away the residue, try using dishwashing liquid or cooking oil at room temperature. This discomfort can be expected to subside completely. Get medical attention if irritation persists. Wash contaminated clothing and clean shoes before reuse.

**Inhalation:** Remove person to fresh air. If signs/symptoms persist, get medical attention.

**If Swallowed:** Do not induce vomiting unless told by a poison control center or doctor. Do not give anything to an unconscious person. For any of the above call a poison control center or doctor immediately for treatment advice.

**HOTLINE:** Have the product container or label with you when calling a poison control center or doctor, or going for treatment. **In case of emergency, call 1-800-222-1222 US PST 6AM - 6PM. See Material Safety Data Sheet (MSDS) for additional information. For an MSDS contact your supplier or visit [www.repelgel.com](http://www.repelgel.com).**

**IMPORTANT NOTICE TO USER: PRODUCT USE:** Many factors beyond Biorepellent Scientific Industries' (BRSI) control and uniquely within the user's knowledge and control can affect the use and performance of a BRSI product in a particular application. Given the variety of factors that can affect the use and performance of an BRSI product, user is solely responsible for evaluating the BRSI product and determining whether it is fit for a particular purpose and suitable for user's method of application. **WARRANTY AND LIMITED REMEDY:** Biorepellent Scientific Industries, Inc warrants that each BRSI product will be free from defects in material and manufacture for 90 days from the date of purchase from an BRSI authorized distributor.

**BRSI MAKES NO OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.**

If a BRSI product does not conform to this warranty, the sole and exclusive remedy is, at BRSI's option, replacement of the BRSI product or refund of the purchase price.

Biorepellent Scientific Industries, Inc.  
10250 Colima Road Whittier, CA 90603  
(877) 775-7633

